


# How To Guide for NEORSD GIS Viewer

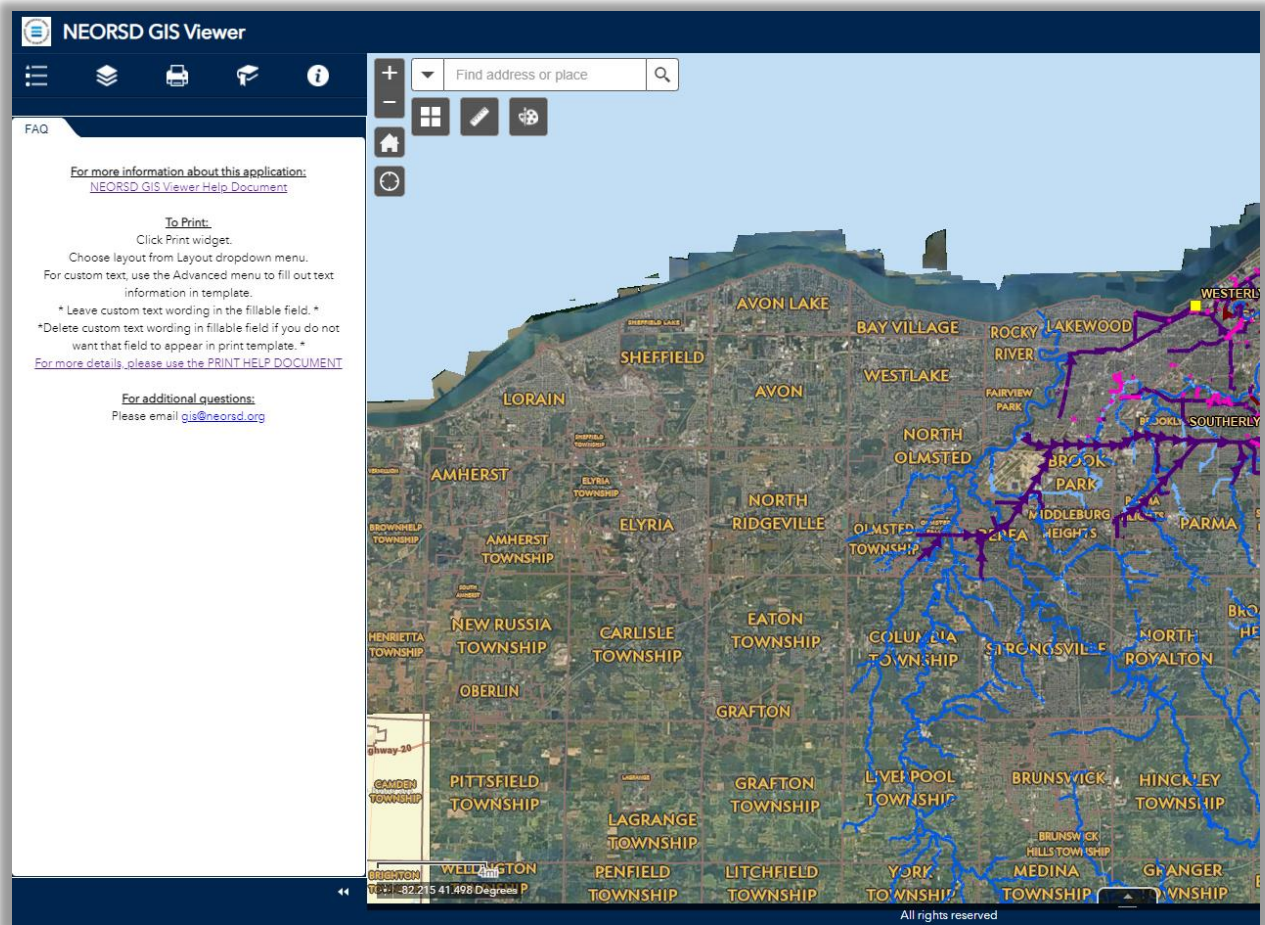

Legend – shows layers visible within map with symbology



Layer List – shows layers within map and allows checkbox turn on/off of each layer. Data will be grayed out if layer has zoom extents applied (will need to zoom in closer to see information).



Print – allows printing with various templates. See additional Print Help Document for more information.



Bookmark – allows creation of bookmarks for return to specific locations.



FAQ – allows access to general help document and print help document.



Basemap Gallery – choose a different basemap option



Measurement – use tool to measure distance or area



Draw – use tool to draw on map



Zoom In/Out – use buttons to navigate zoom levels on map



Home – zooms map to default extent



My Location – uses GPS to locate your position on map



Attribute Table – expands table of attributes of selected data

## To use Nearmap imagery:

Expand the Layer List and scroll to the Nearmap and March Nearmap layers.

Click the checkbox to turn each layer on – March Nearmap layers are leaf-off for visibility.

World Transportation layer will provide street names for imagery layers

\*\*\* World Transportation layer currently will not work in Print Templates -

Layer must be turned off to generate prints \*\*\*

